



Schertler SA Via Beroldingen 18 6850 Mendrisio Switzerland T +41 (0)91 630 07 10 F +41 (0)91 630 07 11 Scan the QR code to open the USER GUIDE

info@schertler.swiss www.schertler.swiss Facebook @schertler.sa Instagram @schertleraudio Youtube @Schertler SA #shareyourschertler




THANK YOU FOR CHOOSING SCHERTLER

SCHERFLE



### **QUICK START**

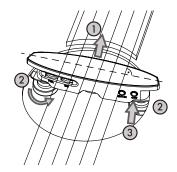

#### INSTALLATION

- 1. Position the MAGNETICO AG6 inside the soundhole and push it as close to the end of the fingerboard as possible. Make sure that the pickup is perpendicular to the strings.
- 2. Turn both wheels counter-clockwise to fix the pickup to the soundboard. Take care not to overtighten the clamps or you may damage the guitar's finishing.

The distance between the strings and the AG6

should be around 5mm (4mm is ideal). If the action is higher you can raise the pickup placing a thickness between the AG6 and the soundboard before tighten the wheels.


3. Connect the 1/8" jack cable to the output.


#### CONNECTION

Now you can plug in your mono jack and discover the pickup's amazing sound.


USER GUIDE available at www.schertler.com


# DYN AG6 RECOMMENDED POSITIONING and WARNINGS

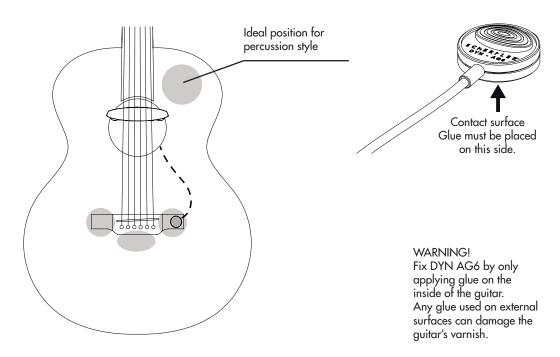

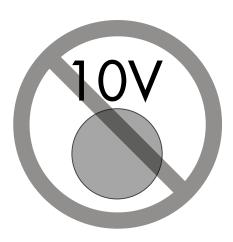

Do NOT use MAGNETICO AG6 with STAT PRE preamp nor activate the 10V on preamps, amps and mixers as it will damage the pickup.

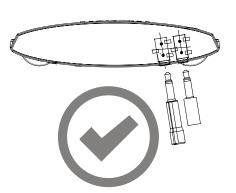

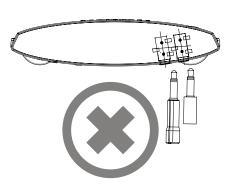

Plug and unplug the 1/8" jack connectors with caution, and only if necessary. These must be perfectly perpendicular when plugging/unplugging.

## **RELATED PRODUCTS**

