


SCHERTLER



Schertler SA  
Via Beroldingen 18  
6850 Mendrisio  
Switzerland  
T +41 (0)91 630 07 10  
F +41 (0)91 630 07 11

info@schertler.swiss  
www.schertler.swiss  
Facebook @schertler.sa  
Instagram @schertleraudio  
Youtube @Schertler SA  
#shareyourschertler

Scan the QR code  
to open  
the USER GUIDE

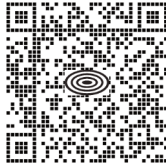

THANK YOU  
FOR  
CHOOSING  
SCHERTLER

RESOCOIL  
QUICK GUIDE V1

# QUICK START

## INSTALLATION

Using double-sided tape, temporarily fix the pickup on the outside of the instrument. See the pictures on the internal pages for typical positioning on the most commonly-used instruments.

Test the pickup, trying out different positions to find the best sound.

Once you have found the best position, remove the strings to access the inside of the body and permanently install the pickup inside the instrument. Fix in place using contact glue (like the one used for shoe repair).

Replace the strings.

USER GUIDE  
www.schertler.com

available at

# INSTALLATION



Fig. 1:  
Installation  
on the side


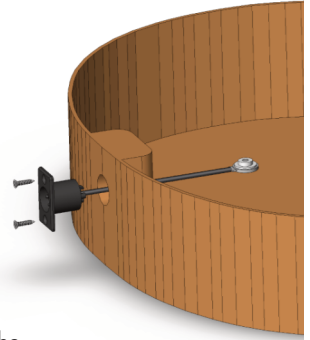


Fig. 2:  
Installation on the  
tailblock


## RESOCOIL JACK

1. Remove the strings
2. Choose whether you want to install the 1/4" jack connector on the side (Fig. 1) or on the tailblock (Fig. 2)
3. Drill a 12 mm hole in the guitar side for the jack connector
4. Install the jack connector by tightening the inside and outside nuts
5. Follow the "Fitting the Microphone" instructions
6. Replace the string set


# RECOMMENDED POSITIONING

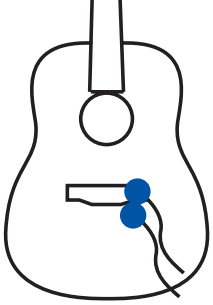


Acoustic guitar

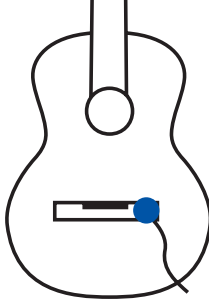


Classical guitar

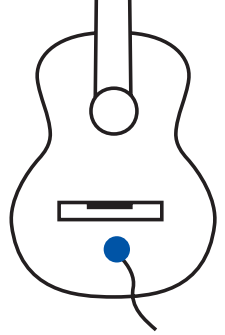


Flamenco/jazz guitar

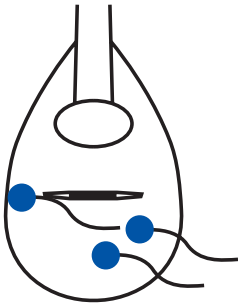

Mandolin - Lute - Oud - Bouzouki

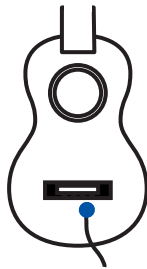


Ukulele

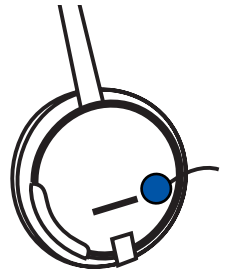


Banjo

# RELATED PRODUCTS

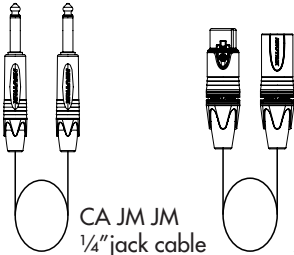


CA JM JM  
1/4" jack cable


CA XF XM  
XLR cable

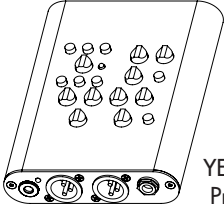


YELLOW SINGLE  
Preamps

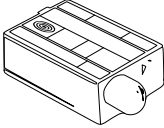


STAT PRE  
Preamp

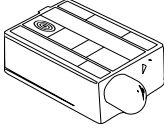


STAT PRE PS  
Preamp

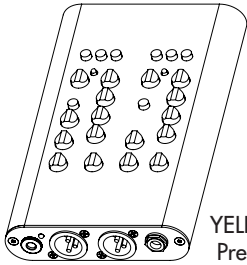

YELLOW BLENDER  
Preamps

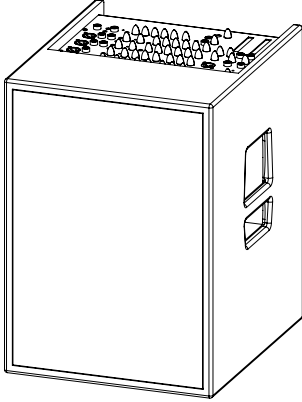

ACOUSTIC  
Amps

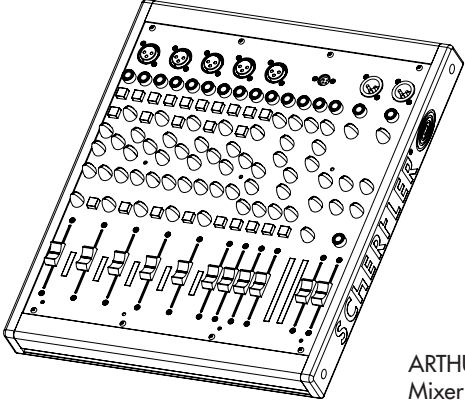

ARTHUR  
Mixer